

AeroCell®

Open Cell Foam Biofilter

Residential Design Guide



Only pods bearing the NSF® mark
are certified NSF/ANSI Standard 40, Class I



©2020 Anua 03-2020



336.547.9338 ■ anuainternational.com

Residential Strength Waste Table


Constituents	Pretreated ¹ Max	Primary Treated ²		
		30-day Avg	7-day Max	30-day Max
CBOD ₅ mg/L	≤ 300	150	200	300
TSS mg/L	≤ 350	75	100	150
TN mg/L	≤ 60	60	75	120
FOG mg/L	≤ 30	20	25	25
pH	6.0 to 9.0	6.0 to 9.0		

¹ Pretreated: Raw wastewater prior to entering the septic tank.

² Primary treated: Effluent at the discharge of the septic tank.

Note: This is Anua's definition of pretreated/primary treated residential wastewater. If the wastewater exceeds these parameters, treatment goals may not be achieved and may require additional treatment.

System with Gravity Recirculation Device

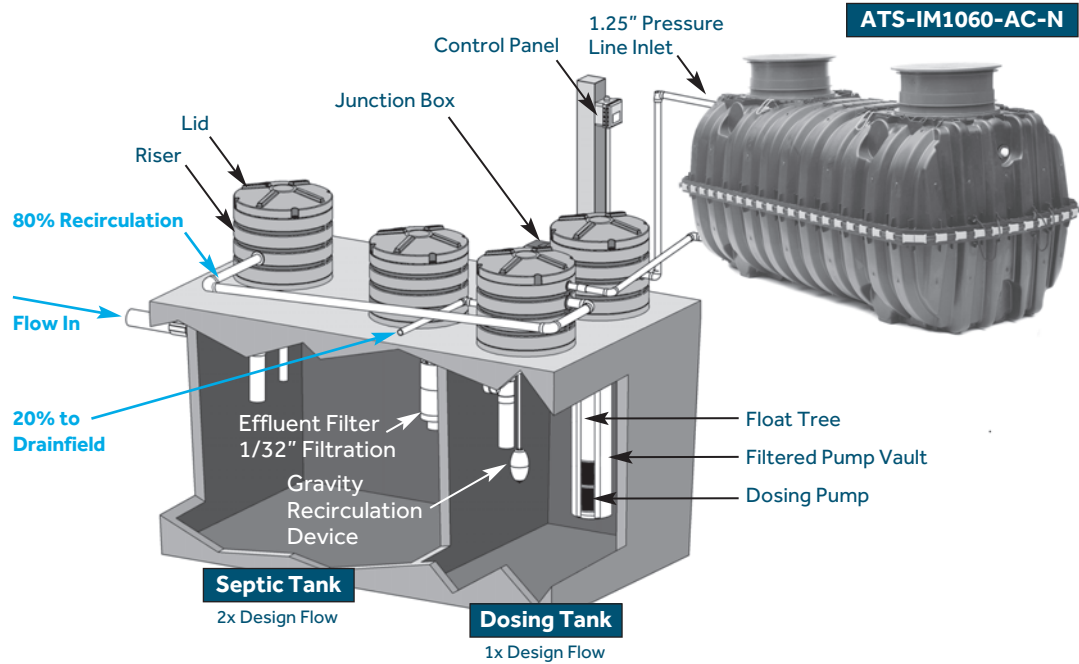

Step 1 Information Gathering

Design Flow (GPD)	Number of Bedrooms	Number of Occupants

Note: Average flow (GPD) is defined as 60% of design flow for 150 GPD per bedroom and 75% of design flow for 120 GPD per bedroom.

Step 2 Size the Septic Tank and Dosing Tank

Model Number	Design Flow (GPD)	Septic Tank Minimum Size (Gal)	Dosing Tank Minimum Size (Gal)
ATS-540-AC-N	500	1000	500
ATS-1060-AC-N	800	1600	800
ATS-1530-AC-N	1500	3000	1500

Step 3 Select an Effluent Filter

NSF 46 approved models with 1/32" filtration

- Lifetime Filter LT9-1/32
- Zabel A300
- Polylok PL-625
- BEST GF10-32


Step 4 Select a Filtered Pump Vault

Available models with heights

Model Number	Height
FPV-H50-4	50"
FPV-H56-4	56"
FPV-H62-4	62"
FPV-H68-4	68"

Step 5 Verify Dosing Pump Based on TDH

Model Number	Total Spray Nozzles
ATS-540-AC-N	2
ATS-1060-AC-N	4
ATS-1530-AC-N	4

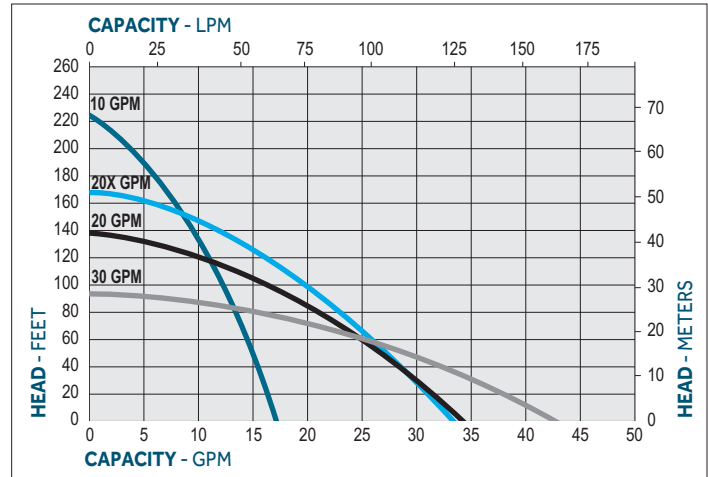

Note 1: TF14 spray nozzles = ~2.9 GPM @ 5 PSI and ~3.4 GPM @ 8 PSI

Note 2: The standard model pump is Little Giant C1 20gpm, 115V model. (see pump curve above)

Step 6 Select Treatment Pod per the Engineering and Technical Specifications Sheet

Step 7 Verify Other Components Included in Standard Package

- 1.25" discharge assembly
- Junction box
- Control panel
- Float switches

Step 8 Select Any Optional Components

- Access risers
- Access lids
- Tank adapters with mounting hardware
- Tank/riser sealant or adhesive
- Rubber grommets



P.O. Box 77457
Greensboro, NC 27417

T 336.547.9338
F 336.547.8559
anuainternational.com

